


Boitier Fdc et Recopie de position F5

Fiche Technique





- 1. Jumper for field selection of 90, 60, 45 and 30 deg, operation for 4–20 mA position transmitter.
- 2. LEDs indicate 4 and 20 mA output.
- 3. Test outlet for 4–20 mA position transmitter.
- 4. Info printed on the PC board.
- **5**. Field selectable direction of 4–20 mA of ouput signal, direct or reverse.
- **6**. Easy to set cams with no fixed increments for true 100% resolution.

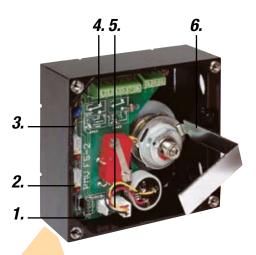

F5 Feedback Unit

F5/F5-EX

- Mounts on P5/EP5 without additional mounting bracket.
- Bright visible, flat or dome position indicator.
- Easy to set stepless cams 100% resolution.
- Switches, mechanical or proximity, P+F Namur sensors.
- Potentiometer or 4–20 mA position transmitter.
- Sturdy, reliable and simple design.
- Explosion proof or intrinsically safe enclosure.
- ATEX, CSA and FM approvals





Easy to install



Install coupling



Place F5 unit on top, tighten screws



Install indicator and cover



Manual F5









Manufacturers declaration • Hersteller-Erklärung • Déclaration de fabricant

GB

Manufacturers declaration

We hereby confirm that the appliances described in this sheet has been manufactured in compliance with the applicable standards and is intended for installation in a machine/application, and that commissioning is strictly prohibited until evidence has been provided that the machine/application in question is also in compliance with

EC directive 2006/42/EC, 2006/95/EC and 2004/108/EC. This manufacturers declaration is applicable to the following PMV series: F5.

D

Hersteller-Erklärung

Hiermit erklären wir, daß die in diesem Blatt beschriebenen Geräte entsprechend den gültigen Normen gebaut und zum Einbau in eine Maschine oder Applikation bestimmt sind, sowie daß deren Inbetriebnahme so lange untersagt ist, bis festgestellt wurde, daß diese Maschine/Applikation ebenfalls der EG-Richtlinie 2006/42/EC, 2006/95/EC und 2004/108/EC.

Diese Herstellererklärung hat für folgende PMV-Serien Gültigkeit:

Déclaration de fabricant

Nous déclarons par la présente que les appareils décrits sur cette page sont construits en conformité avec les normes en vigueur et qu'ils sont destinés à être montés dans une machine ou une application, nous déclarons également que leur mise en service est interdite tant qu'il n'a pas été constaté que cette macine/application satisfait

également à la directive 2006/42/EC, 2006/95/EC et 2004/108/EC. Cette déclaration de fournisseur est valable pour les types d'appareils PMV suivants:

Mr. Jan-Eric Andersson

The al

President, Palmstiernas International AB

PMV Feedback module storage and handling procedures

PMV feedback modules are precision instruments which should be stored and handled accordingly to avoid problems or damage.

Feedback modules contain electronic components which can be damaged by exposure to water. Appropriate precautions should be taken to protect units while in storage.

Warehouse storage

-Stored in original PMV shipping containers, units should be stored in an environmentally controlled area, i.e. clean, cool (15-26°C, 60-80°F) and dry, out of direct sunlight or weather exposure.

Field storage

- If feedback units must be stored outdoors, make sure front covers are tightened, all conduits entries are sealed and that units not are exposed to direct sunlight, rain or snow.

Potential damage mechanism

When units are stored in hot, humid climates, the daily heating/cooling cycle will cause air to expand/contract and be drawn in and out of the feedback housing through ports left open. Dependent on the local temperature variations, humidity and dew points and time in storage, condensation could occur and accumulate inside causing erratic operation or failure due to water and corrosion. The potential for condensation damage is especially high in southern climates and aggravated if units are exposed to direct sunlight.

For further assistance, please contact you nearest PMV office.


Storage Seal

F5 is supplied with conduit entry points sealed. The seal is only a storage seal, not to be used as seal when F5 is in operation.

If Storage Seal is removed or damaged, make sure conduit entry points are resealed before further shipping or storage.

Use proper cable glands or vapour proof tape.

Mount F5 on positioner P5/EP5 or actuator/valve package. Remove Storage Seal for conduit entry $\rm E_1$ & $\rm E_{2'}$ make electrical connections, install proper cable glands or plugs to ensure the units sealing.

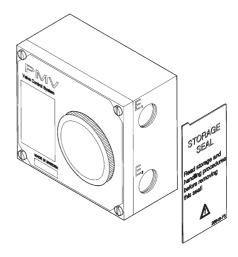




Description


The PMV F5 is a feedback unit uniquely designed to mount on top of the PMV P5, EP5 or P-2000 positioners with minimum parts required. The F5 can also be mounted on actuators with an additional mounting kit. The F5 is available in two different enclosures, standard or explosion proof.

The standard enclosure for F5 offers a gasketed NEMA 4 / IP66 enclosure with optional American and European intrinsically safe approvals. The explosion proof version is approved NEMA 7 / IP66 and carries North American and European approvals. Both enclosures can be furnished with Namur sensors, mechanical or proximity switches, potentiometer or 4-20 mA position transmitter or a combination of these items.

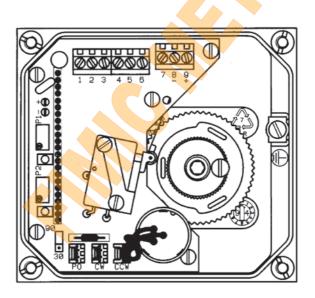


Product label

F5 IS Intrinsically safe

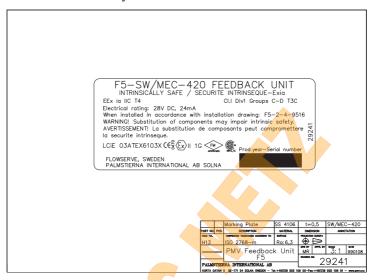

F5 EX Explosion proof

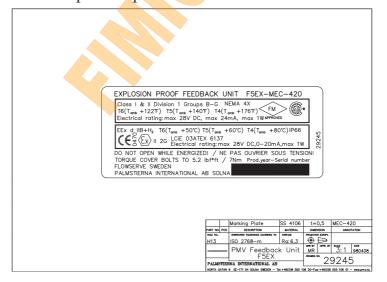

Manual F5 -5-

Modell code

F5 feedback unit model code

```
Not for Hazardous areas
Model No
   5
         Feedback unit, to be installed on top of P5/EP5, no cover incl.*
      Electrical connection
             2 x M20 x 1,5
             2 x 1/2" NPT
          Surface treatment
                Epoxy, ED
                Tufram
                Switches
                MEC
                            2 x SPDT switches
                N A M
                            2 X Namur sensors
                Р
                   XY
                            2 x SPDT proximty switches
                         Feedback
                         X X X
                                     None
                          PO
                               т
                                     Potentiometer, 5 kOhm
                          P
                            1 K
                                     Potentiometer, 1 kOhm
                          P
                                     Potentiometer, 180 deg
                            1 8
                            2 0
                          4
                                     4-20 mA transmitter
                          Т
                             1 8
                                     4-20 mA transmitter, 180deg
                            2 7
                                     4-20 mA transmitter, 270 deg
                                     Spindle
                                               For installation on P5/EP5, no other spindle available.
                                               Temperature
                                                     Nitrile, NBR -40 to +85 deg C
F 5 - 0 0 - Z
```

* For stand alone mounting, select F5IS

F 5 -


F5IS & F5EX feedback unit model code

```
Model No
   5
                Feedback unit, intrinsically safe ATEX, CSA, FM, incl. cover
  5 E X
                Feedback unit, explosion proof, ATEX, CSA,FM, incl. cover
             Electrical connection
                    2 x M20 x 1,5
1/2" NPT x 2
             Ν
                Surface treatment
                U
                       Epoxy, ED
                M
                       Tufram
                       Switches
                                     2 x SPDT switches
                        MEC
                        N A M
                                     2 X Namur sensors
                                     2 x SPDT proximty switches
                                 Feedback
                                  XX
                                               None
                                  POT
                                               Potentiometer, 5 kOhm
                                  P 1
                                               Potentiometer, 1 kOhm
                                               Potentiometer, 180 deg
                                     2 0
                                               4-20 mA transmitter
                                  T 1
                                               4-20 mA transmitter, 180 deg
                                        8
                                  T 2
                                               4-20 mA transmitter, 270
                                               Spindle
                                                         For installation on P5/EP5
                                                0 0
                                                2 3
                                                         Rotary, Namur, VDI/VDE 3845
                                                         More spindles are available, contact PMV
                                                         Frontcover
                                                                       90 deg, 0-100% scale
                                                          P V 6
                                                                       60 deg, 0-100% scale
                                                          P V 4
                                                                       45 deg, 0-100% scale
                                                          Ρ
                                                                       30 deg, 0-100% scale
                                                                0
                                                                       Blank, no scale
                                                                   Function
                                                                    D
                                                                         Direct
                                                                    R
                                                                          Reverse
                                                                      Indicator
                                                                             Indicator
                                                                             No indicator
                                                                       В
                                                                       н
                                                                             Dome style
                                                                              Temperature
                                                                              Z Nitrile. NBR -40 to +85 dea C
```

|-| |- P V | |- Z Manual F5 -6-

Mounting on P5 or EP5

- See www.pmv.nu/downloads for video clip.
- Remove the front cover and the indicator from the positioner.
- Loosen and remove the Allen head screw (3) (5mm hex-wrench)
- Install drive coupling (4) on the positioner shaft, secure it with screw (3)
- Check that F5is fitted with 4 nos of screws 5 and O-ring 9, install the F5 on top of the positioner unit, make sure that the coupling is properly engaged before tightening the four screws 5.

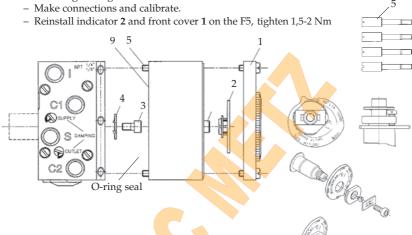


Mounting F5 on actuator (On/Off control valves)

Install the spindle adaptor 1 into F5 shaft, make sure that a spring clip 2 is fitted. A solid click should be heard when the spindle adaptor is properly installed into the F5 shaft.

Mount F5 on the actuator using a mounting kit and the ISO F05 mounting holes on the bottom of the F5. Make sure that the F5 spindle is properly alligned on top of the actuator.


Check that the four fasteners 3 are installed into F5.

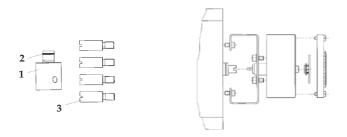

Manual F5 -7-

Mounting on P-2000/P-2020

- Remove front cover, indicator and cam nut from the positioner
- Replace the cam nut with coupling 1, calibrate the positioner.
- Check that the gasket is fitted to the bottom of plate 2, install screws 5 (3x long, 1x short) plastic washer 6 and O-rings 7.
- Secure the F5 to the plate 2 with screws 3.
- Install assembly onto the positioner, make sure that coupling 1 is properly engaged.
- Make electrical connections and calibrate.

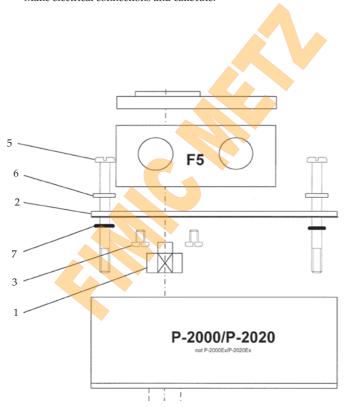

Manual F5 -8-


F5-EX

The F5-EX is approved explosion proof by CSA, FM and ATEX. Front cover screws shall be tightened 7 Nm (5,2 lbf x ft).

Approvals:


CSA, FM Div. 1, Class 1,2 & 3 Group BCDEFG T4-T6

ATEX II 2 G EEx d IIB + H2 T4-T6

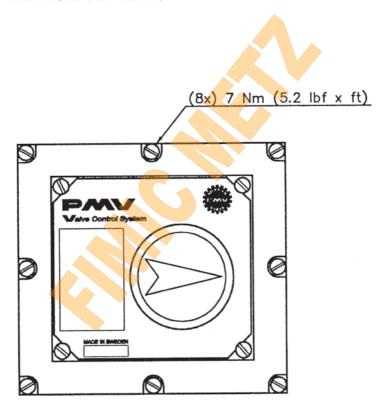


Installing F5-EX on P5/EP5

- See www.pmv.nu/downloads for video clip.
- Remove front cover, indicator and Allen head screw from the positioner.
- Install drive coupling 4 and secure it with the Allen head screw.
- Remove front covers and indicator from the F5-EX unit.
- Remove screws 3.
- Install F5-EX on P5/EP5, , make sure drive coupling is properly engaged before tightening screws 5.
- Reinstall and tight screws 3. Connect and calibrate.
- Reinstall front covers and indicator.

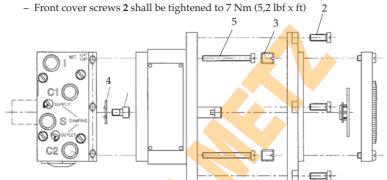

Installing on an actuator

- Remove front covers and indicator from the F5-EX unit.
- Remove screws 3 and (5). Reinstall and tight screws 3.
- Install drive shaft into F5-EX, a solid click should be heard when spindle adapter is properly installed.
- Mount F5-EX on the actuator using the F05 holes and a mounting kit.
- Connect and calibrate, reinstall front covers and indicator.
- Front cover screws 2 shall be tightened to 7 Nm (5,2 lbf x ft).

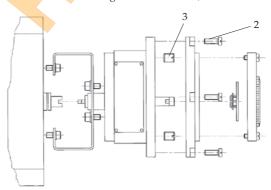

Manual F5 -10-

Connections

WARNING!

Units installed in hazardous locations must have proper agency approvals and be installed according to installation drawing F5-2-4-9516.

Conduit entries are PG13,5 (M20) or NPT 1/2"


Make electrical connections according to wiring diagrams and tighten cable glands. Terminals are 2.5 mm² (AVG 14) screw terminals.

Adjustments

CAUTION! Moving parts - risk of injury.

The cams/gear wheel are secured in position by friction provided from the cam/shaft assembly. To adjust switches and/or position transmitter, rotate gear wheel 2 and cams 3 to desired position using tool F5-22 or tip of a screw driver that fits snuggly in one of the slotted holes. Start calibration procedure by adjusting position transmitter first, then continue with the lower switch and complete with the upper switch.

If cams exhibit high stiction, rotate them back and forth rapidly several times. Do not adjust nut 4 or lubricate cams, call PMV for assistance.

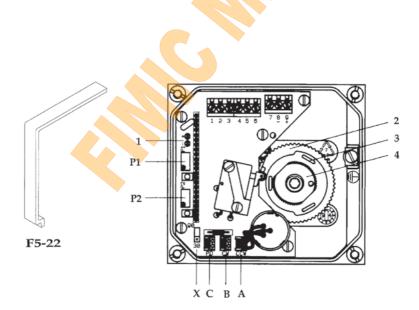

Manual F5

Calibration

 
4-20 mA position transmitter

Instruction video available on www.pmv.nu/downloads

- Set direction of rotation by placing potentiometer jumper in location A or B. (Location A for counter clockwise CCW valve/actuator rotation (Direct), location B for clockwise CW valve/actuator rotation (Reverse).
- 2. Set jumper X to the desired valve rotation angle, for 30 deg or 45 deg rotation choose position 30, For 60 deg or 90 deg rotation choose position 90, for 180 deg rotation choose position 30 and for 270 deg rotations choose position 90.


For 30° deg - 45° deg choose pos 30.


- 3. Make electrical connections according to wiring diagram. Power supply should be >9 to <28 VDC (24 VDC recommended).
- 4. Connect a 4-20 mA meter to testoutlet 1. Adjust potentiometer P1 20 revolutions CW & P2 20 revolutions CCW. Stroke actuator to the desired 4 mA position and check that current deflection is correct. Rotate gear wheel 2 with tool F5-22 or tip of a screw driver placed in one of the slotted holes until minimum value is reached.
- 5. Adjust the output signal 4,0 mA with potentiometer **P2**. LED will illuminate when out put is 4 mA (±1%) or less. Stroke actuator to the desired 20 mA position and adjust the output to 20,0 mA with potentiometer **P1**. LED will illuminate when out put is 20 mA (±1%) or more.
- 6. Stroke actuator again, check and adjust 4 mA and 20 mA readings. Install front cover or set switches first, as follows:




Switches & Sensors

   Limit switches cams must be adjusted separately with valve in an open and closed position. With the valve in fully open or closed position adjust the lower cam 3 to desired position by rotating it with special tool F5-22 or by the tip of a screw driver placed in one of the slotted holes on the cam. Stroke the valve fully and repeat the procedure above to set the upper cam. Stroke valve open/closed to check proper limit switch operation.










Potentiometer only (no transmitter function)

 - 1. Make electrical connections to terminals 7,8 and 9. Check that the potentiometer is connected to connector **C** on the printed circuit board.
- 2. Stroke the actuator to check direction of travel indicated by the potentiometer. To change direction of travel, swap wires at terminals 7 and 9.
- 3. Stroke the actuator to the position where the minimum potentiometer resistance is desired.
- 4. Adjust the potentiometer output reading to approx. 50 Ohm by rotating gear wheel 2 with special tool F5-22 or tip of a screw driver placed in one of the slotted holes.
- Stroke the actuator to desired maximum resistance position and check reading.
- 6. Repeat steps 3-5 if necessary to obtain desired resistance change.
- 7. Set switches or install frontcover.



Technical specifications

Conduit entries 2x 1/2 NPT or 2x PG 13,5 (M20) Housing material Die cast aluminum Surface treatment ED painting According to VDI/VDE 3845 Mounting Stainless steel A2/A4 2,5 mm² (AVG 14) Fasteners Terminals IP66, NEMA 4 Enclosure

Weight

Standard enclosure Explosion proof

0.7 kg (lbs 1.5) 2.1 kg (lbs 4.6)

Switches, mechanical

Type Mechanical SPDT V3 *6/2,5A 250 VAC *Res/Ind CSA,UL,VDE Rating Approvals -40°C to 80°C (-4°F to 185°F) Temp range

Sensors, Namur

Proximity DIN 19234 NAMUR Type Load Current ≤ 1mA ≥ 3mA 5-25 VDC Voltage range Hysteresis -20°C to 80°C (-4°F to 185°F) Temp range

Potentiometer

Out put

Temp range

Conductive plastic Elements Power rating at 70° 1 \/\/ Linearity 1% Resolution Essentially infinite Temp range -40°C to 80°C (-4°F to 185°F)

 $5k\Omega$ (4k Ω at 90°)

4-20 mA position transmitter

9-28 VDC (24VDC recommended) Power supply Out put signal 4-20 mA LED indication at 4 mA +1% LED indication at 20 mA +1% Resolution Infinite Minimum rotation travel 300 Maximum rotation travel an <1% of full scale Linearity Hysteresis <0,5% of full scale Out put current limit 24 mA DC 800 Ω at 24 VDC Load impedance -40°C to 80°C (-4°F to 185°F)

Switches proximity

Contact rating

Maximum operating time Breakdown voltage Contact resistance Switch type

Mechanical and electrical life


2 W or 2 VA @ 30 VDC/ VAC, 0.1 A 0.5 miliseconds 200VDC 0.2 Ohms SPDT hermetically sealed

>10 million operations

in one unit



Connection of F5 intrinsically safe version

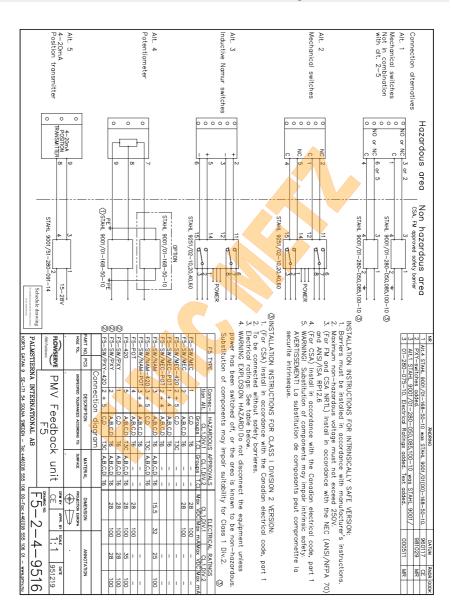

Manual F5 -14-





ATTESTATION D'EXAMEN CE DE TYPE

- 2 Appareils et systèmes de protection destinés à être utilisés en atmosphères explosibles Directive 94/9/CE
- Numéro de l'attestation CE de type LCIE 03 ATEX 6103 X
- Appareil ou système de protection

Module de contrôle (Feed back unit)

Type: F5-SW/MEC, F5-SW/MEC-420, F5-SW/NAM-POT,
F5-SW/NAM, F5-SW/NAM-420, F5-SW/NAM-POT, F5-POT, F5-420, F5-SW/PXY, F5-SW/PXY/420 et F5-SW/PXY/POT

- 5 Demandeur: PALMSTIERNAS INSTRUMENTS AB
- 6 Adresse: Korta Gatan 9

SE-171 54 SOLNA SUFPE

- Cet appareil ou système de protection et ses variantes éventuelles acceptées est décrit dans l'annexe de la présente attestation et dans les documents descriptifs cités en annexe.
- Le LCIE, organisme notifié sous la référence 0081 conformément à l'article 9 de la directive 94/9/CE du Parlement européen et du Conseil du 23 mars 1994, certifie que cet appareil ou système de protection est conforme aux exigences essentielles en ce qui concerne la sécurité et la santé pour la conception et la construction d'appareils et de systèmes de protection destinés à être utilisés en atmosphères explosibles, données dans l'annexe II de la directive. Les vérifications et épreuves figurent dans notre rapport confidential Nº 60006923/501480.
- Le respect des exigences essentielles en ce qui concerne la sécurité et la santé est assuré par la conformité aux documents suivants : -EN 50014 (1997) + amendements 1 et 2
 - -EN 50020 (1994) et EN 50284 (1999).
- 10 Le signe X lorsqu'il est placé à la suite du numéro de l'attestation, indique que ce matériel ou système de protection est soumis aux conditions spéciales pour une utilisation sûre, mentionnées dans l'annexe de la présente attestation.
- 11 Cette attestation d'examen CE de type concerne uniquement la conception et la construction de l'appareil ou du système de protection spécifié, conformément à la directive 94/9/CE. Des exigences supplémentaires de cette directive sont applicables pour la fabrication et la fourniture de l'appareil ou du système de protection
- 12 Le marquage de l'appareil ou du système de protection devra comporter, entre autres indications utiles, les mentions suivantes : € 111 G

EEx la IIC T4

Fontenay-aux-Roses, le 16 avril 2003

- EC TYPE EXAMINATION CERTIFICATE
- Equipment or protective system intended for use in potentially explosive atmospheres Directive 94/9/EC
- EC type Examination Certificate number LCIE 03 ATEX 6103 X
- Equipment or protective system:

Examination in processors systems with the Monitoring unit (Feed back unit).

Type: F5-SW/MEC, F5-SW/MEC-420, F5-SW/MAM-POT, F5-W/MAM-420, F5-SW/MAM-POT, F5-POT, F5-420, F5-SW/PXY, F5-SW/PXY/420 and F5-SW/PXY/POT

- 5 Applicant : PALMSTIERNAS INSTRUMENTS AB
- Address : Korta Gatan 9 SE-171 54 SOLNA

SWEDEN

- This equipment or protective system and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.
- LCIE, notified body number 0081 in accordance with article 9 of the Directive 94/9/EC of the European Parliament and Council of 23 March 1994, certifies that this equipment or protective system has been found to comply with the essential Health and Safety Requirements relating to the design and construction of equipment and protective system nded for use in potentially explosive atmospheres, given in Annex II of the Directive. The examination and test results are recorded in confidential

report No 60006923/501480.

- Compliance with the Essential Health and Safety Requirements has been assured by compliance with:
 - -EN 50014 (1997) + amendments 1 and 2 -EN 50020 (1994) and EN 50284 (1999).
- 10 If the sign X is placed after the certificate number, it indicates that the equipment or protective system is subject to special conditions for safe use specified in the schedule to this certificate.
- This EC Type examination certificate relates only to the design and construction of this specified equipment or protective system in accordance with the Directive 94/9/EC. Further requirements of the Directive apply to the manufacture and supply of this equipment or protective
- The marking of the equipment or protective system shall include the following:

111G EEx ia IIC T4

Le Directeur de l'organisme certificateur Manager of the certification body

LHELT Isabelle HELLER Timbre sec / Dry seal

Page 1/3

Seul le texte en français peut engager la responsabilité du LCIE. Ce document ne peut être reproduit que dans son intégralité, sans aucune modification The LCIE's liability applies only on the French text. This document may be reproduced in full and without any change

LCIE

Une société de Bureau Veritas



(A1) ANNEXE

(A1) SCHEDULE

(A2) ATTESTATION D'EXAMEN CE DE TYPE

LCIE 03 ATEX 6103 X

(A3) Description de l'équipement ou du système de protection : (A3) Description of Equipment or Protective System: Module de contrôle (Feed back unit)

Type: F5-SW/MEC, F5-SW/MEC-420, F5-SW/MEC-POT, F5-SW/NAM, F5-SW/NAM-420, F5-SW/NAM-POT, F5-POT, F5-420, F5-SW/PXY, F5-SW/PXY/420 et F5-SW/PXY/POT

Le module de contrôle détecte la position et le sens de déplacement d'un disque ou d'un arbre.

Selon les capteurs montés, il peut exister onze modèles. Certains modèles comportent un transmetteur 4-20 mA.

Les capteurs inductifs, certifiés de sécurité intrinsèque, raccordés aux bornes 2-3 et 5-6 peuvent être de type :
PEPPERL & FUCHS, type NJ2-V3-N,
Ou IFM ELECTRONICS, type NS 5002,

Ou équivalent

Le marquage est le suivant :

PALMSTIERNAS ou PMV Adresse: Type: F5**** (1) N° de fabrication Année de construction : ... @ II 1 G EEx ia IIC T4 LCIE 03 ATEX 6103 X

(1) selon les variantes définies ci-dessus

Le marquage CE est accompagné du numéro d'identification de l'organisme notifilé responsable de la surveillance du système approuvé de qualité (0081 pour le LCIE).

Le matériel devra également comporter le marquage normalement prévu par les normes de construction du matériel électrique concerné

Paramètres spécifiques du ou des modes de protection concerné(s):

* Transmetteur 4-20 mA - Bornes 8-9 : Ui = 28 V, Ii = 100 mA, Li = 0 et Ci = 68 nF. * Capteurs inductifs - Bornes 2-3 et 5-6 : Ui = 15,5 V, Ii = 31 mA, Li = 190 μH et Ci = 70 nF

* Potentiomètre - Bornes 7-8-9 ;

Ui = 28 V, Pi = 0,85 W.

(A4) Documents descriptifs :

Dossier technique N° F5_24.DOC/01 Rév 0 en date du 25

Ce document comprend 33 rubriques (35 pages).

(A2) EC TYPE EXAMINATION CERTIFICATE

LCIE 03 ATEX 6103 X

Monitoring unit (Feed back unit)

Type: F5-SW/MEC, F5-SW/MEC-420, F5-SW/MEC-POT, F5-SW/NAM, F5-SW/NAM-420, F5-SW/NAM-POT, F5-POT, F5-420, F5-SW/PXY, F5-SW/PXY/420 and F5-SW/PXY/POT

The monitoring unit detects the position and the direction of displacement of a disk or a shaft.

According to the integrated sensors, there are eleven models. Some of the models include a 4-20 mA transmitter.

The inductive sensors, intrinsically safe certified, connected to terminals 2-3 and 5-6 could be as following

PEPPERL & FUCHS, type NJ2-V3-N, Ou IFM ELECTRONICS, type NS 5002,

The marking is the following:

PALMSTIERNAS or PMV Address: ... Type: F5**** (1) Serial number Year of construction : II 1 G EEx ia IIC T4 LCIE 03 ATEX 6103 X

(1) according to the variations as described below.

The CE marking shall be accompanied by the identification number of the notified body responsible for surveillance of the approved quality system (0081 for LCIE).

The equipment must also carry the usual marking required by the manufacturing standards applying to such equipments.

Specific parameters of the mode of protection concerned :

* 4-20 mA transmitter - Terminals 8-9 : Ui = 28 V, Ii = 100 mA, Li = 0 and Ci = 68 nF. * Inductive sensors - Terminals 2-3 and 5-6 : Ui = 15,5 V, Ii = 31 mA, Li = 190 μH and Ci = 70 nF. * Potentiometer - Terminals 7-8-9:

Ui = 28 V. Pi = 0.85 W.

(A4) Descriptive documents:

Technical file No F5_24.DOC/01 Rev 0 dated February 25th, 2003.

This file includes 33 items (35 pages).

Page 2/3

F5 IS



(A1) ANNEXE

(A1) SCHEDULE

(A2) ATTESTATION D'EXAMEN CE DE TYPE

LCIE 03 ATEX 6103 X

(A2) EC TYPE EXAMINATION CERTIFICATE

LCIE 03 ATEX 6103 X

(A5) Conditions spéciales pour une utilisation sûre :

Les différents circuits du matériel ne devront être raccordés qu'à des matériels certifiés de sécurité intrinsèque ou matériels associés de sécurité intrinsèque, et ces associations devront être compatibles avec les régles de la sécurité intrinsèque.

Les différents circuits peuvent être considérés comme séparés si aucune des tensions appliquées ne dépasse 30 V.

(A6) Exigences essentielles en ce qui concerne la sécurité et

Conformité aux normes européennes EN 50014 (1997 + amendements 1 et 2), EN 50020 (1994) et EN 50284 (1999).

Vérifications et épreuves individuelles Néant. (A5) Special conditions for safe use:

The various circuits of the electrical apparatus must only be connected to intrinsically safe certified electrical apparatus or to intrinsically safe accessories, and these combinations must be compatible with the rules of intrinsic safety.

The various circuits may be considered as separated if none of the voltages applied exceeds 30 V.

(A6) Essential Health and Safety Requirements:

Conformity to the European standards EN 50014 (1997 + amendments 1 and 2), EN 50020 (1994) and EN 50284 (1999). Individual examinations and tests

Page 3/3

CAN/CSA-C22.2 No. 94-M91 CSA Std C22.2 No. 142-M198 CSA Std C22.2 No. CSA Std C22.2 No.

142-M1987 25-1966 30-M1986

Process Control Equipment Special Purpose Enclosures

éal, Torento, Edmonten, Vancouver, Tokyo, Hong Kong

Explosion-Proof Enclosures for Use in Class I Hazardous Locations

Enclosures for Use in Class II, Groups E, F and G Hazardous Locations

APPLICABLE STANDARDS T4 (amb + 80C)

Certificate of Compliance

Certificate Number: LR 69005-12

Issued to:

Stockholm S-113 53, PALMSTIERNAS INSTRUMENTS AB Fulegatan 15, 3 tr.

Attention: Mr. Mats Ragnarsson

Date Issued: July 3, 1997

The products listed below are eligible to bear the CSA Mark

Issued by: Y. Khitrov, P. Eng. Toronto, ON Canada

respect des exigences essentielles en ce qui concerne la curité, et la santé est assuré par la conformité aux

signe X lorsqu'il est placé à la suite du numéro de testation, indique que ce matériel ou système de nées dans l'annexe de la présente

- Model F5EX Series feedback units, rated 28V de max; 24mA max, Models F5EX-MEC, -MEC/POT, -MEC/POT, -MEC/420, -NAM,
 NAM/POT, -NAM/420, -POT and -420, enclosure Type 4X. Temperature Code T6 (amb. +50C max), T5(amb + 60C max).

Class I, Groups B, C, and D; Class II, Groups E, F and G; Class III

PRODUCTS

CLASS 2258 02 - PROCESS CONTROL EQUIPMENT - For Hazardous Locations

12 Le marquage de l'appareil ou du systèn comporter, entre autres indications

EEx d IIB+H2 T6 ou T5 ou T4





ATTESTATION D'EXAMEN CE DE TYPE

EC TYPE EXAMINATION CERTIFICATE

intended for use

Appareil ou système de protection Module de contrôle antidéflagrant

Equipment or protective system Flameproof feedback unit Type: F5EX-... LCIE 03 ATEX 6137

PALMSTIERNAS INSTRUMENTS AB Korta Gatan 9 SE-171 54 SOLNA

SE-171 54 SOLNA

Cet appareil ou système de protection et ses variantes éventuelles acceptées est décrit dans l'annexe de la présente attestation et dans les documents descriptifs cités

Le LCIE, organisme notifié sous la référence (0881 conformément à l'article 9 de la directive 94/9/CE du Parlement européen et du Conseal du 23 mars 1994, certifie que cet appareil ou système de protection est conforme aux etigenzas essentiales en ce qui concerna la sécurité et la santé pour la conception et la construction d'appareils et de systèmes de protection destinés à être utilisés en primosphiries explosibles, domnées dans l'amonavi II de la difective. Les vérifications et éperuves figurent dans notre rapport confidentiel N° 60006916/501500. This equipment or protective system and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.

-EN 50014 (1997) + amendments 1 and 2 -EN 50018 (2000). Compliance with the Essential Requirements has been assured by o

If the sign X is placed after the certificate number, it indicates that the equipment or protective system is subject to special conditions for safe use specified in the schedule to this certificate.

nanufacture and supply of this equipment or protective

Le Directeur de l'organisme certificateur Manager of the certification body



destinés à être utili

Numéro de l'attestation CE de type LCIE 03 ATEX 6137

C/EI, notified body number (081 in accordance with article of the Directive 94/9/EC of the European Preliament and Council of 23 March 1994, confilins that this equipment of Council of 23 March 1994, confilins that this equipment of Council of Council of Council with the essential fealth and Safety Requirements relating to the

design and construction of equipment and protective system intended for use in potentially explosive atmospheres, given in Annax il of the Directive.

The examination and test results are recorded in confidential report No 60006916501500.

This EC Type examination certificate relates only to the design and construction of this specified equipment on protective system in accordance with the Directive eAIBEC. Further requirements of the Directive apply to the

The marking of the equipment or protect include the following:

EEx d IIB+H₂ T6 or T5 or T4

Manual F5

F5-EX



(A2) ATTESTATION D'EXAMEN CE DE TYPE **LCIE 03 ATEX 6137**

Module de contrôle antidéflagrant Type: F5EX-... ion de l'équipement ou du système de protection

matériel monté sur une valve de positio vinations concernant la position per l'intermédiaire d'un rrupteur mécanique ou inducté adou un mouvempat-uiaire par l'intermédiaire d'un transmetteur de courses una par l'intermédiaire d'un transmetteur de courses

EEx d IIB+H₂ T6 ou T5 ou T4 T6 pour T amb = + 50°C, T5 pour T amb = + 60°C, T5 pour T amb = + 80°C

VE PAS OUVRIR SOUS TENSION selon les variantes définies dans la notice descriptive du

érature ambiante : de -20°C à + 80°C

ouvé de qualité (0081 pour le LCIE) ra également comporter le marquage i par les normes de construction du matérie

amètres spécifiques du ou des modes de protect

arquage CE est accompagné du numéro d'identification de anisme notifié responsable de la surveillance du système

on maximale : 28 V C.C. int : 0-20 mA, ance maximale : 1 W.

(A4) Documents descriptifs ssier technique N° F5X-030225.0 Rév 0 en date du 25 février document comprend 30 rubriques (32 pages)

(A5) Conditions spéciales pour une utilisation sure

Conformité aux normes européennes EN 50014 (1997 amendements 1 et 2) et EN 50018 (2000). (A6) Essential Health and Safety Rec None.

(A3) Description of Equipment or Protective System **LCIE 03 ATEX 6137**

Type: F5EX-... nted on top of a valve positioner gives ositioning via mechanical or inductive ting angle via potentiometer or current

The equipment must also carry the usual marking required by the manufacturing standards applying to such equipments. The CE marking shall be accompanied by the identification number of the notified body responsible for surveillance of the approved quality system (0081 for LCIE). according to the variations as described descriptive notice. DO NOT OPEN WHILE ENERGIZED

Namum bower 28 V C.C. 0-20 mA, 1 W.

(A5) Special conditions for safe use Technical file No F5X-030225.0 Rev This file includes 30 items (32 pages) 0 dated February 25th

Conformity to the European standards EN 50014 (1997 + amendments 1 and 2) et EN 50018 (2000). Individual examinations and tests

FACTORY MUTUAL

Factory Mutual Research Corporation 1151 Boston-Providence Tumpike P.O. Box 9102 Norwood, Massachusetts 02062

J.I. 1B5A9.AE

October 14, 1997

(3615)

HAZARDOUS (CLASSIFIED) LOCATIONS SERIES F5EX FEEDBACK UNIT

PALMSTIERNAS INSTRUMENT AB S-113 53 STOCKHOLM TULEGATAN 15 SWEDEN

LINTRODUCTION


the inter-laboratory agreement between FMRC and CSA. Association (CSA) performed the examination and testing for possible FMRC Approval based on Conforation (FMRC) Approval of their Series F5EX Feedback Unit as explosionproof for Class I, Division 1, Groups B, C and D; dust-ignitionproof for Class II, Division 1, Groups E, F and G hazardous (classified) locations, indoors and outdoors (NEMA Type 4X). Canadian Standards 1.1 Palmstiernas Instrument AB (manufacturer) requested Factory Mutual Research

in the FMRC Approval Guide as follows: 1.2 The Listing in the FMRC Approval Guide for the Series F5EX Feedback Unit will appear

XP/I/1/BCD; DIP/II/1/EFG

Feedback Unit. Models FSEX-MEC, FSEX-MEC/420, FSEX-MEC/POT, FSEX-NAM, FSEX-NAM/420, FSEX-NAM/POT, FSEX-POT and FSEX-420.


Spare Parts

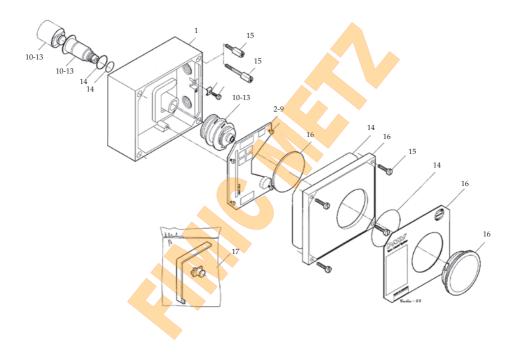

Spare Parts List

DWG	PMV	Description		
No	Part no	•	•	
1		Housing		
2	28176	PC board incl. 2 x Mechanical switches	1	
3	28177	PC board incl. 2 x Mechanical switches and potentiometer	1	
4	28178	PC board incl. 2 x Mechanical switches and 4-20 mA transmitter	1	
5	28179	PC board incl. 2 x Namur sensors	1	
6	28181	PC board incl. 2 x Namur sensors and 4-20 mA transmitter	1	
7	29272	PC board incl. 2 x Proximity switches	1	l i
8	29270	PC board incl. 2 x Proximity switches and potentiometer	1	
9	29271	PC board incl. 2 x Proximity switches and 4-20 mA transmitter	1	
10	29227	Cam & shaft assy for Mechanical switches or Namur sensors	1	
11	29275	Cam & shaft assy for Proximity switches	1	
12	29228	Cam & shaft assy for Mechanical switches or Namur sensors + transmitter	1	
13	29276	Cam & shaft assy for Proximity switches + transmitter	1	
14	F5-SEAL-NBR	Elastomer kit, Nitrile NBR		1
15	F5-SCREWS	Screw kit F5		1
16	F5-AS2-PV90	Front cover assembly incl.flat indicator		1
17	F5-SP22	Coupling F5-S00 and Adjusting Tool F5-22		1

Dimension drawing

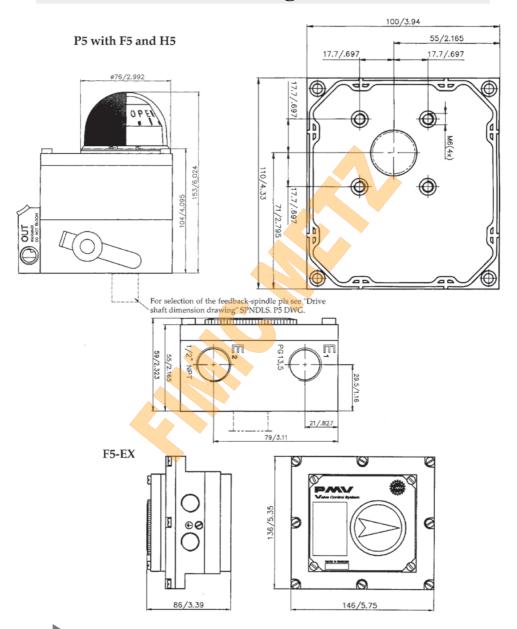



Troubleshooting

Switches

Check electrical connections and cam settings.

Potentiometer

If there is no output signal, check electrical connections and for open circuit, check that potentiometer is not out of it's mechanical range. If output deflection is wrong reverse connection terminals 7 and 9.

4-20 mA position transmitter

If there is no output signal, check electrical connections, polarity, loop power supply, and that the potentiometer is within its range.

If full output signal cannot be achieved by adjustment, check supply voltage and jumper X settings.

If output signal increases and decreases in the wrong direction, move connector from A to B or vice versa.

If the 4 mA fine adjustment P2 does not have enough span, zero must be mechanically realigned as follows: Turn P2 20 revolutions counter clockwise, then repeat the transmitter calibration procedure.

Palmstierna International AB Korta Gatan 9 SE-171 54 Solna **SWEDEN** Tel: +46 (0) 8 555 106 00 Fax: +46 (0) 8 555 106 01 E-mail: infopmv@flowserve.com Internet: www.pmv.nu

SUBSIDIARIES:

Flowserve

Abex Road Newbury

Berkshire RG14 SE4

HK

Tel: +44 (0) 1635 49 400

Fax: +44 (0) 1635 36 034

E-mail: pmvuk@flowserve.com

PMV-USA, Inc

1440 Lake Front Circle

Unit 160

The Woodlands, Texas 77380

LISA

Tel: +1 281 292 7500

Fax: +1 281 292 7760

E-mail: pmvusa@flowserve.com

Flowserve Postfach 2310

Sperberweg 16

41468 NEUSS GERMANY

Tel: +49 (0) 2131 795 74 80 Fax: +49 (0) 2131 795 74 99

E-mail: pmvgermany@flowserve.com

(The information in this brochure is subject to change without notice.)

Distributor



4, rue des Nonnetiers - Actipôle de Metz - Borny 57070 METZ

Tél: 03.87.76.32.32 Fax: 03.87.76.99.76 Email: fimic@fimic.com

http://www.fimic.com